

MODULAR PLANTER FIXED HEIGHT LINE

FHL400WS-400/600/800/1000/1200
FHL560WS-400/600/800/1000/1200

ALSO AVAILABLE IN GALVANISED STEEL (SC20GS)

Choose from 5 panel lengths of 400, 600, 800, 1000 and 1200mm to achieve desired size in either the 400mm or 560mm height.

ACCESSORIES AND REQUIRED FIXINGS (NOT INCLUDED)

✓ Tek Screws (12G X 16mm):
(part 1 uses 12 screws, part 2 & 3 use 6 each)

✓ Universal Bracing Strap with pins




✓ Anchor Set with Fixing Parts (for retaining wall applications)



JOIN SETS REQUIRED FOR JOINING PANELS

- ✓ FHL400JS-WS-400/560 Straight Join Breakaway Set (1)
- ✓ FHL-UCSI-WS-400/560 Closed Corner Join Breakaway Set (2)
- ✓ FHL-UCSE-WS-400/560 Open Corner Join Set (3)

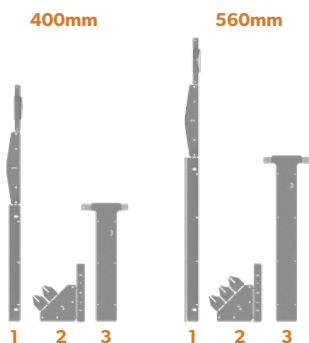

USE AS

- ✓ Raised beds for all garden types
- ✓ Retainers (One wall or Closed Shape)

IDEAL FOR

- ✓ Square/Rectangular free standing beds
- ✓ Long 'garden barrier' beds
- ✓ Hard surface Areas, ie patios & rooftops
- ✓ Tables & bench seats (create own top)
- ✓ Hidden Fixings with bolt down capabilities.

PREPARATIONS

When building the box bed, do so on a flat work surface. Create a level installation base for set up.

BRACING AND RETAINING


Bracing is required for beds when Straight Joins are used.

STEP 1

Break off brace to correct length, as shown in *figure 1*.

STEP 2


Fix brace between the top of one join and the bottom of the opposing join through the oval holes with bolts supplied.

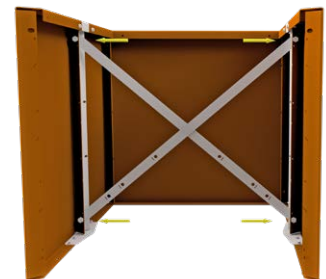

NB: For retaining use where one side only is built, use the Anchor Set with Fixing Parts, concreting the posts in first. Fix to top and bottom with Tek screws as shown.



figure 1.

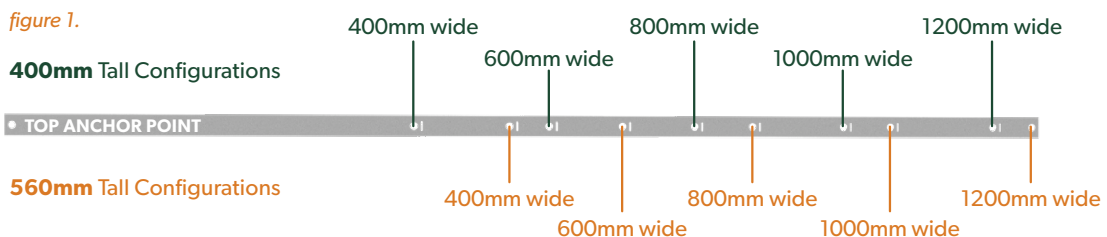


INSTALLATION INSTRUCTIONS

CONNECT PANEL LENGTHS WITH JOIN SETS TO MAKE ONE SOLID BED.
THE 3 POSSIBLE JOINS ARE AS FOLLOWS.

STRAIGHT JOIN

- A.** Insert top join bracket, align holes and screw in place.
- B.** Locate base join bracket with guide holes and screw in place.
- C.** Insert the vertical joiner plate and fix with screws through guide holes.

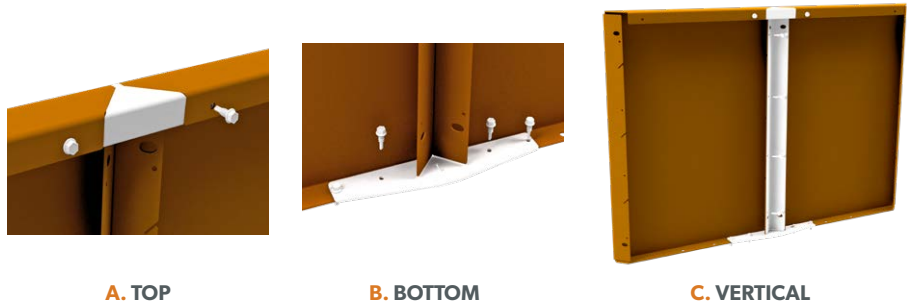


A. TOP

B. BOTTOM

C. VERTICAL

CLOSED CORNER JOIN

- A.** Snap off top corner bracket and fold by hand using pliers.
- B.** Insert top bracket behind edge rim, align guide holes and screw.
- C.** Locate base corner bracket inside with guide holes aligned, securing through outer holes first.
- D.** Insert peg sliders into slots at back of join. Gently hammer home.

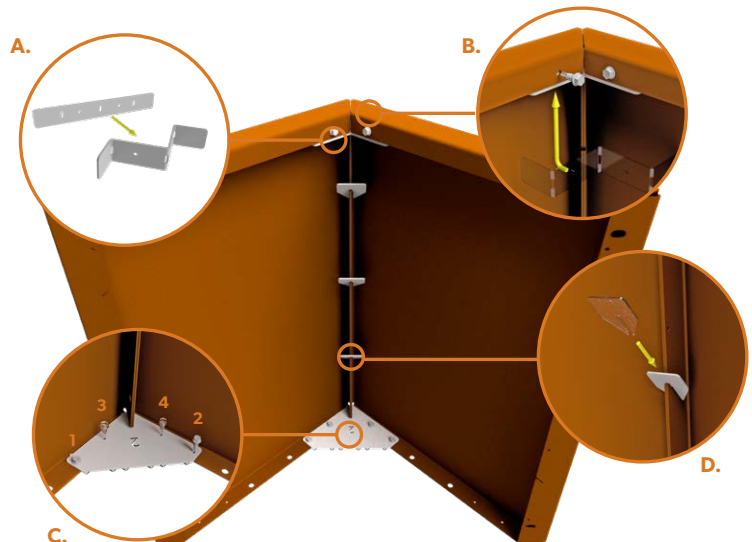

A.


B.

C.

D.

OPEN CORNER JOIN

- A.** Slide in vertical join plate(3) and secure to top rim with screws.
- B.** Screw through remaining guide holes down plate.

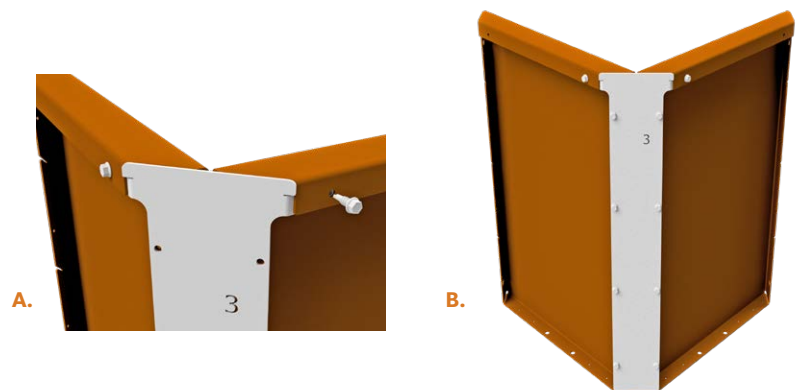

A.

B.

Tip: You may have several panel combinations that can make the same size bed so consider what combo will give the neatest seam arrangement.

Pro - tip: For hard surface installs consider attaching base join brackets on underside, screwing up from below. This means the screws don't point down into the floor!